## Nastavení defaultní MAC adresy na routeru Tenda

r, v menu i	zanzem zvonne p		in settings .		
Tenda	System Setting	5		English 🔻   Exi	
🖀 Internet Status					
Internet Settings	<b>4</b> 2	6	● <		
	LAN IP Settings 192.168.0.1	DHCP Reservation Not Configured	WAN Settings	Time Settings	
Sleeping Mode	A		₽ <b>₽</b>	<u> </u>	
🗄 USB Application	Login Password Change the login	Reboot	Firmware Upgrade V15.03.2.13_multi	Backup/Restore Backup a file to local host	
	password	~			
K Advanced Settings	-∿-		≫	<b>₽</b>	
💿 System Settings	System Status Good	System Log	Auto Maintenance Enabled	Reset Clear all settings of the	
$\hat{\mathbf{U}}$				router	

1) V menu zařízení zvolíme položku "System Settings".

2) Po kliknutí na volbu "WAN Settings" se otevře okno s možností nastavení portu WAN.

Tenda	System Settings			English *   Exit		
Enternet Blakes						
🚖 Informét Settings (						
🗢 Wireless Settings	WAN Settings			× Time Settings		
🤹 Guest Network	MTU:	1500		(77)		
<ul> <li>Sleeping Mode</li> </ul>	WAN Speed	1000M auto-negotiation		Backun/Restore		
B USB Application	MAC Address	Default	-	citup a file to local hest		
A 1979	3	Default MAC Address CORA 3	5.08.00	Kopirovat		
<ul> <li>System Settings</li> </ul>				Vybrgt vše Hiedat "C8:3A:35:0B:DC:" na webu "Google"		
		Save		Iento rám		
				Prozkoumat prvek		

3) Označíme defaultní MAC adresu a zkopírujeme ji.



4) V řádku "MAC Address" zvolíme možnost "Manual", a do nově otevřeného políčka vložíme zkopírovanou MAC adresu. Po té klikneme na "Save".